



## **Wood Filler**

Wood fillers can be used in filling small gaps, cracks, dents, and holes in residential wood floors.

Floors with excessive movement from foot traffic may cause wood filler to break loose, dislodge and cause aesthetic concerns. Always follow wood filler manufacturer's instructions for application.

Wood fillers do not generally expand and contract with the surrounding wood so maintaining proper environmental conditions are essential to keep your wood floor looking its best.

Permanent heat, light and ventilation shall be installed and operating before, during and after installation, controlling a temperature range of 55 to 75 degrees and a relative humidity range compatible with expected environmental conditions when the home is occupied. (Maintaining a maximum 15 percent difference between high and low humidity levels). Expected minimum/maximum indoor relative humidity will depend upon home design, geographic location, and HVAC systems and operating schedules. Consult your local MFMA Installer for specific information.

If you have additional questions, contact MFMA's Technical Director at 888-480-9138.

© Copyright 2022

Revised 8/2013

*Disclaimer: MFMA provides general information to architects, specifiers, and consumers. MFMA, its members, officers and agents disclaim any responsibility whatsoever for the accuracy or applicability of these guidelines under all circumstances and conditions.*

**Maple Flooring Manufacturers  
Association**

Toll Free: 888/480-9138

E-mail: [mfma@maplefloor.org](mailto:mfma@maplefloor.org) [www.maplefloor.org](http://www.maplefloor.org)